


Sentry as gateway installation

The purpose of this user guide is to provide you with an overview of the device Sentry600 and clear instructions on how to complete the installation of Sentry600 as a gateway

1

Place the Sentry close to where the Sentinels will be launched or uploaded (<30m)

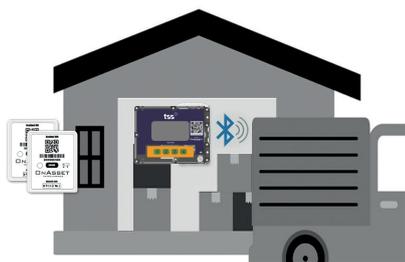

2

Connect Sentry to USB charger + power outlet >15 hours, verify Batt: 100% on the display



3

To verify GSM connection, review the display for reception bars.

If you don't have connection, please email customer.service@tss.se for instructions. Add "Gateway connection error" as the email title.



4


To enable the upload of Sentinels to CCIS on arrivals, always keep the Sentry plugged into the power



5

Once installed, e-mail customer.service@tss.se with your site name and Sentry gateway ID number. Add 'Gateways installed' as e-mail title.



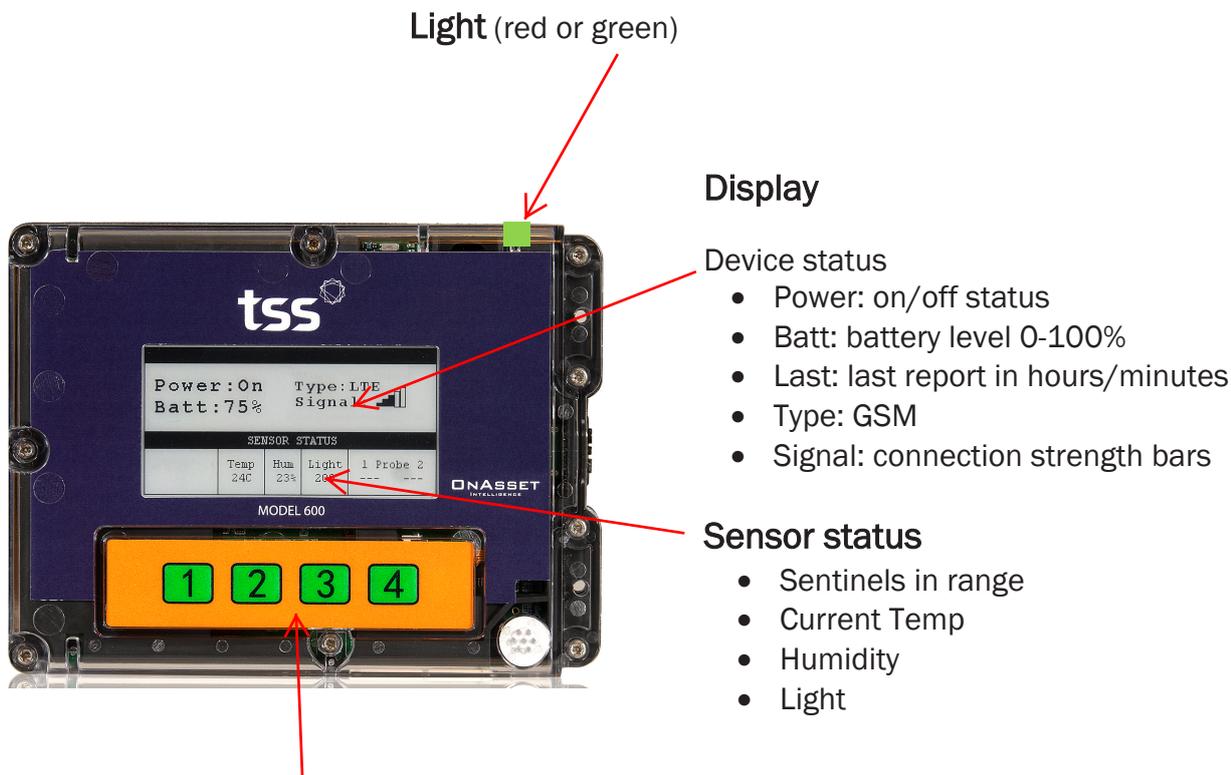

Buttons 1,2,3,4 (no features)

GATEWAY

(blue label)

Mounted at sending and receiving site for uploading sentinel data to cloud



IN-TRANSIT

(green label)

Shipment location tracker

