


Receiving a Shipment

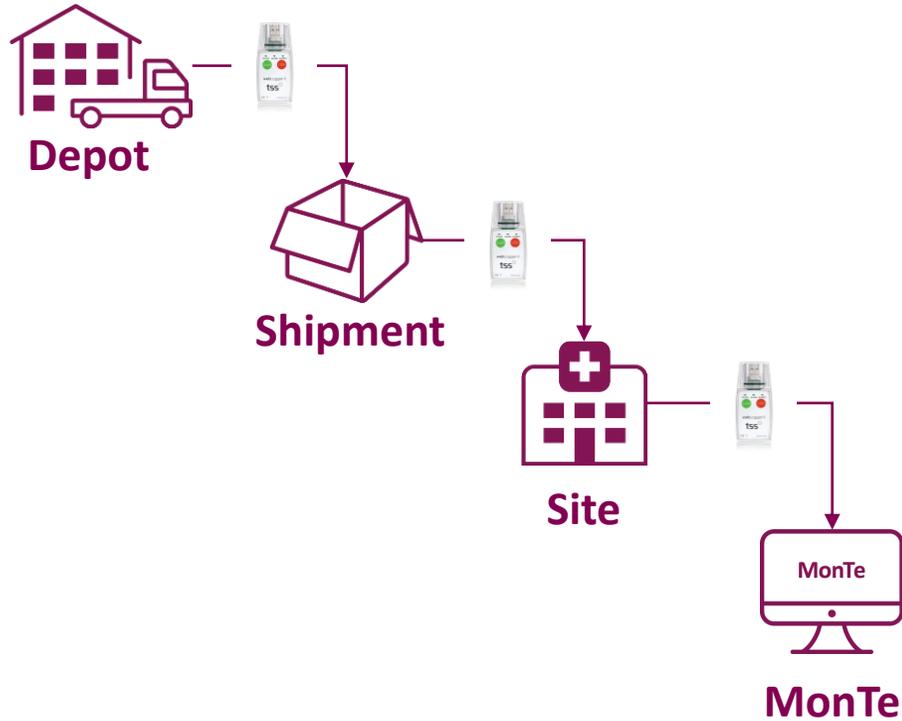

A webLogger records kit temperature in a shipment throughout its journey from depot to site

Uploading shipment temperature data to MonTe



1

- Remove the webLogger from the shipment on receipt
- Press **STOP** on the webLogger, hold for 3 seconds
- Insert the webLogger into the USB port on your device

2

- **File Explorer** opens to the webLogger data file
- Select the file to open **MonTe**
- Login with your username and password

3

- Upload data file onto **MonTe**
- Add other documentation and confirm upload
- Data is analysed and outcomes delivered automatically

4

- **There are 3 potential outcomes :**
 1. No excursion, drugs **OK** to use
 2. Excursion detected, no action required, drugs **OK** to use
 3. Deviation detected action required

5

- Study Drugs are confirmed **OK** to use
- Temperature Excursion is detected and the system triggers automated resolution process with AZ